INSTRUCTION MANUAL





Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

- Caulking: no sealant is required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR

- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.
 An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and metal parts looking new.
- We recommend wiping the glass panels with a squeegee after each use.

TOOLS REQUIRED


SPIRIT LEVEL	POWER DRILL	PENCIL	SILICONE	MALLET
TAPE MEASURE	SCREW DRIVER	6mm&3mm(1/4" & 1/8") DRILL BITS	HACKSAW	SAFETY GLASSES

^{*} Use a 6mm($\frac{1}{4}$ ") drill bit for ceramic when drilling into ceramic tiles

CHOOSE A CONFIGURATION



PARTS LISTING

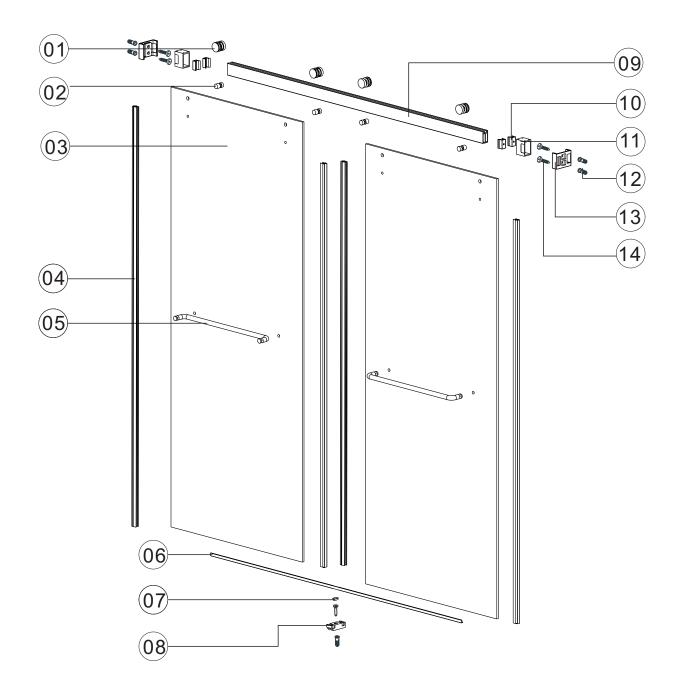

ITEM	PARTS	DIAGRAM	QTY
1	Roller		4
2	Anti jumping knob	O	4
3	Sliding door		2
4	Door seal		4
5	Towel bar		2
6	Anti-splash threshold		1
7	Floor guide cover cap		1

ITEM	PARTS	DIAGRAM	QTY
08	Floor guide		1
09	Rail		1
10	Anti-collision block		4
11	Guide rail bracket		2
12	Wall plugs		5
13	Wall mount bracket		2
14	Screw	©	5

